





* as of 10/97

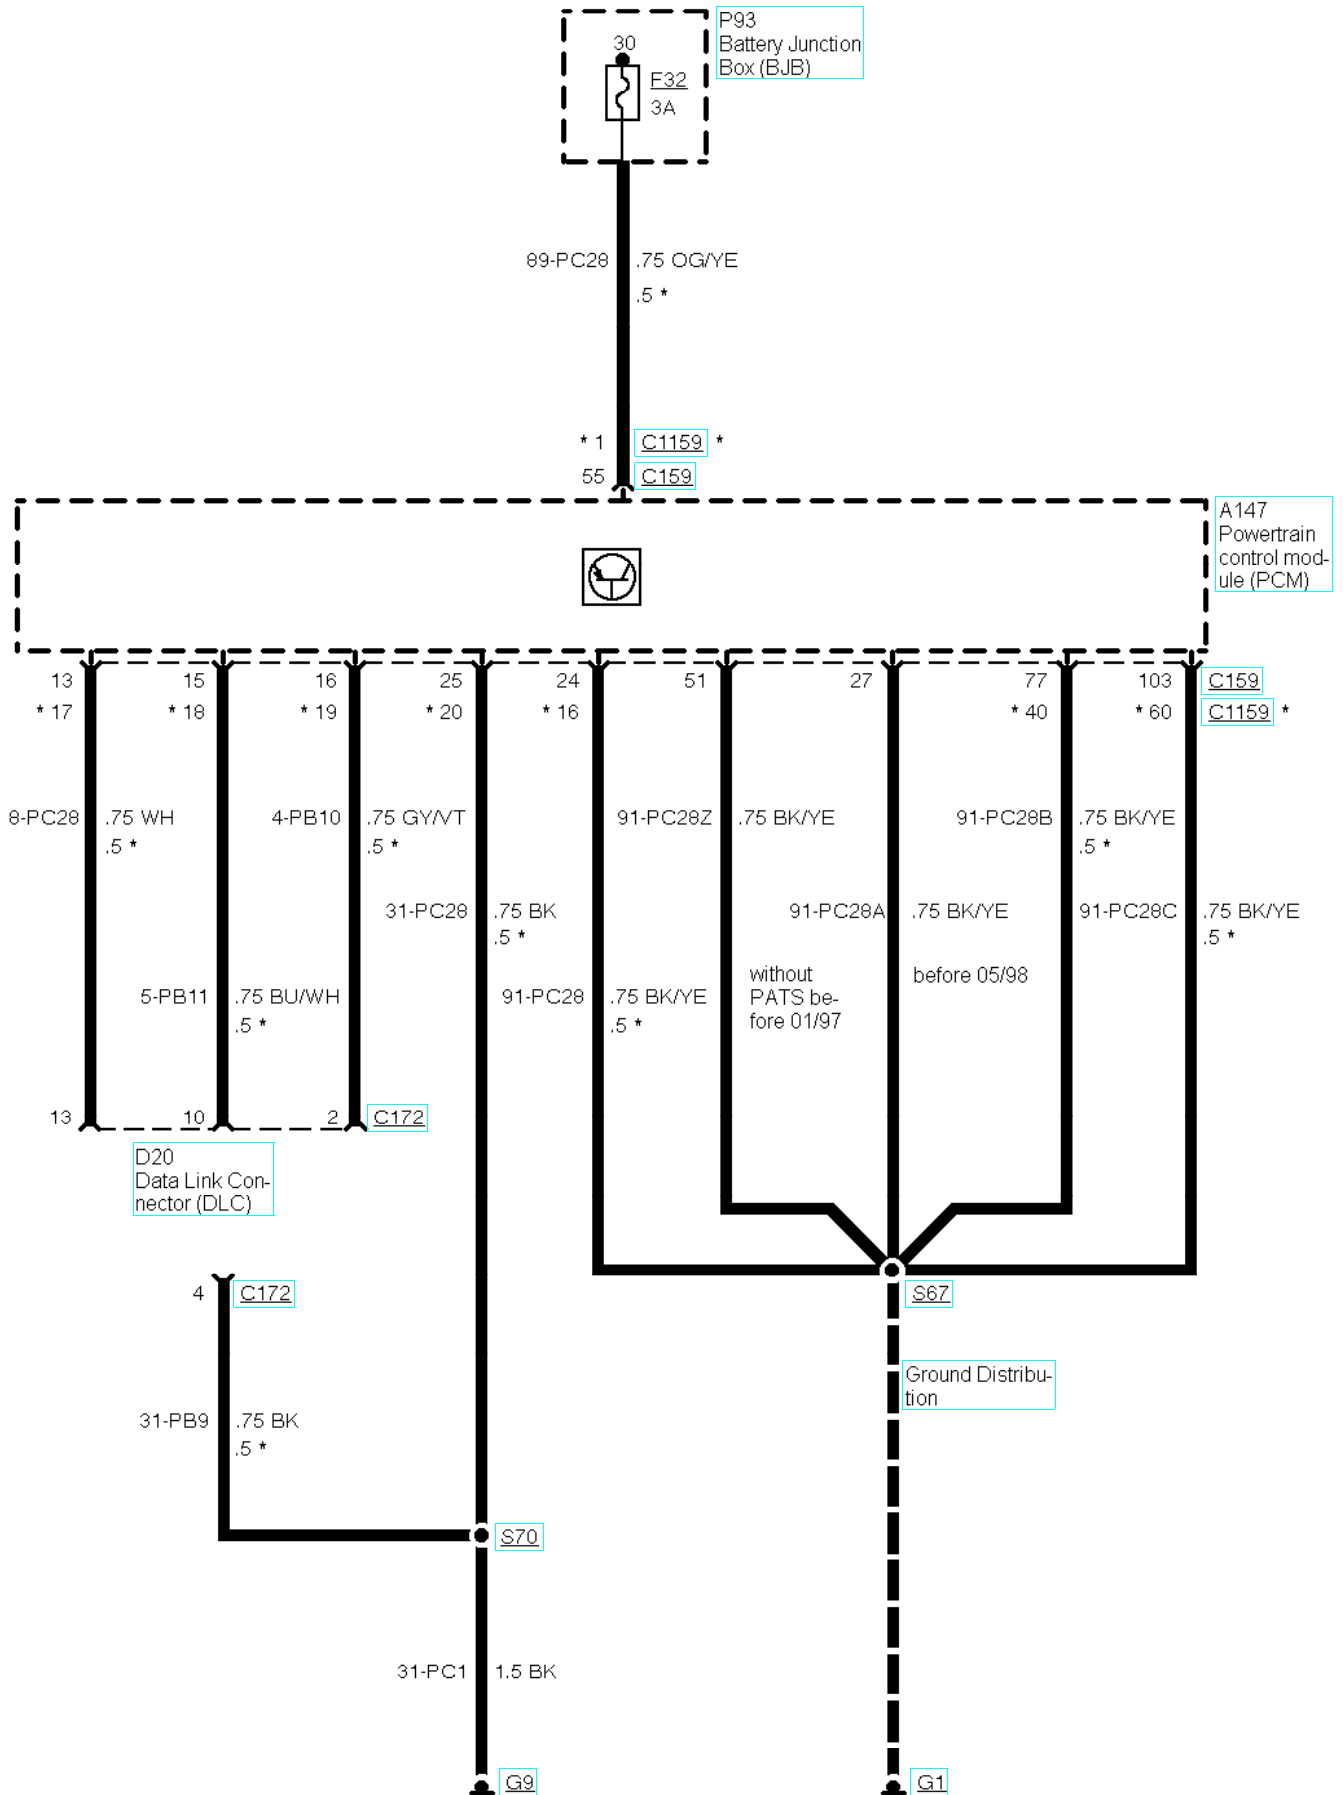

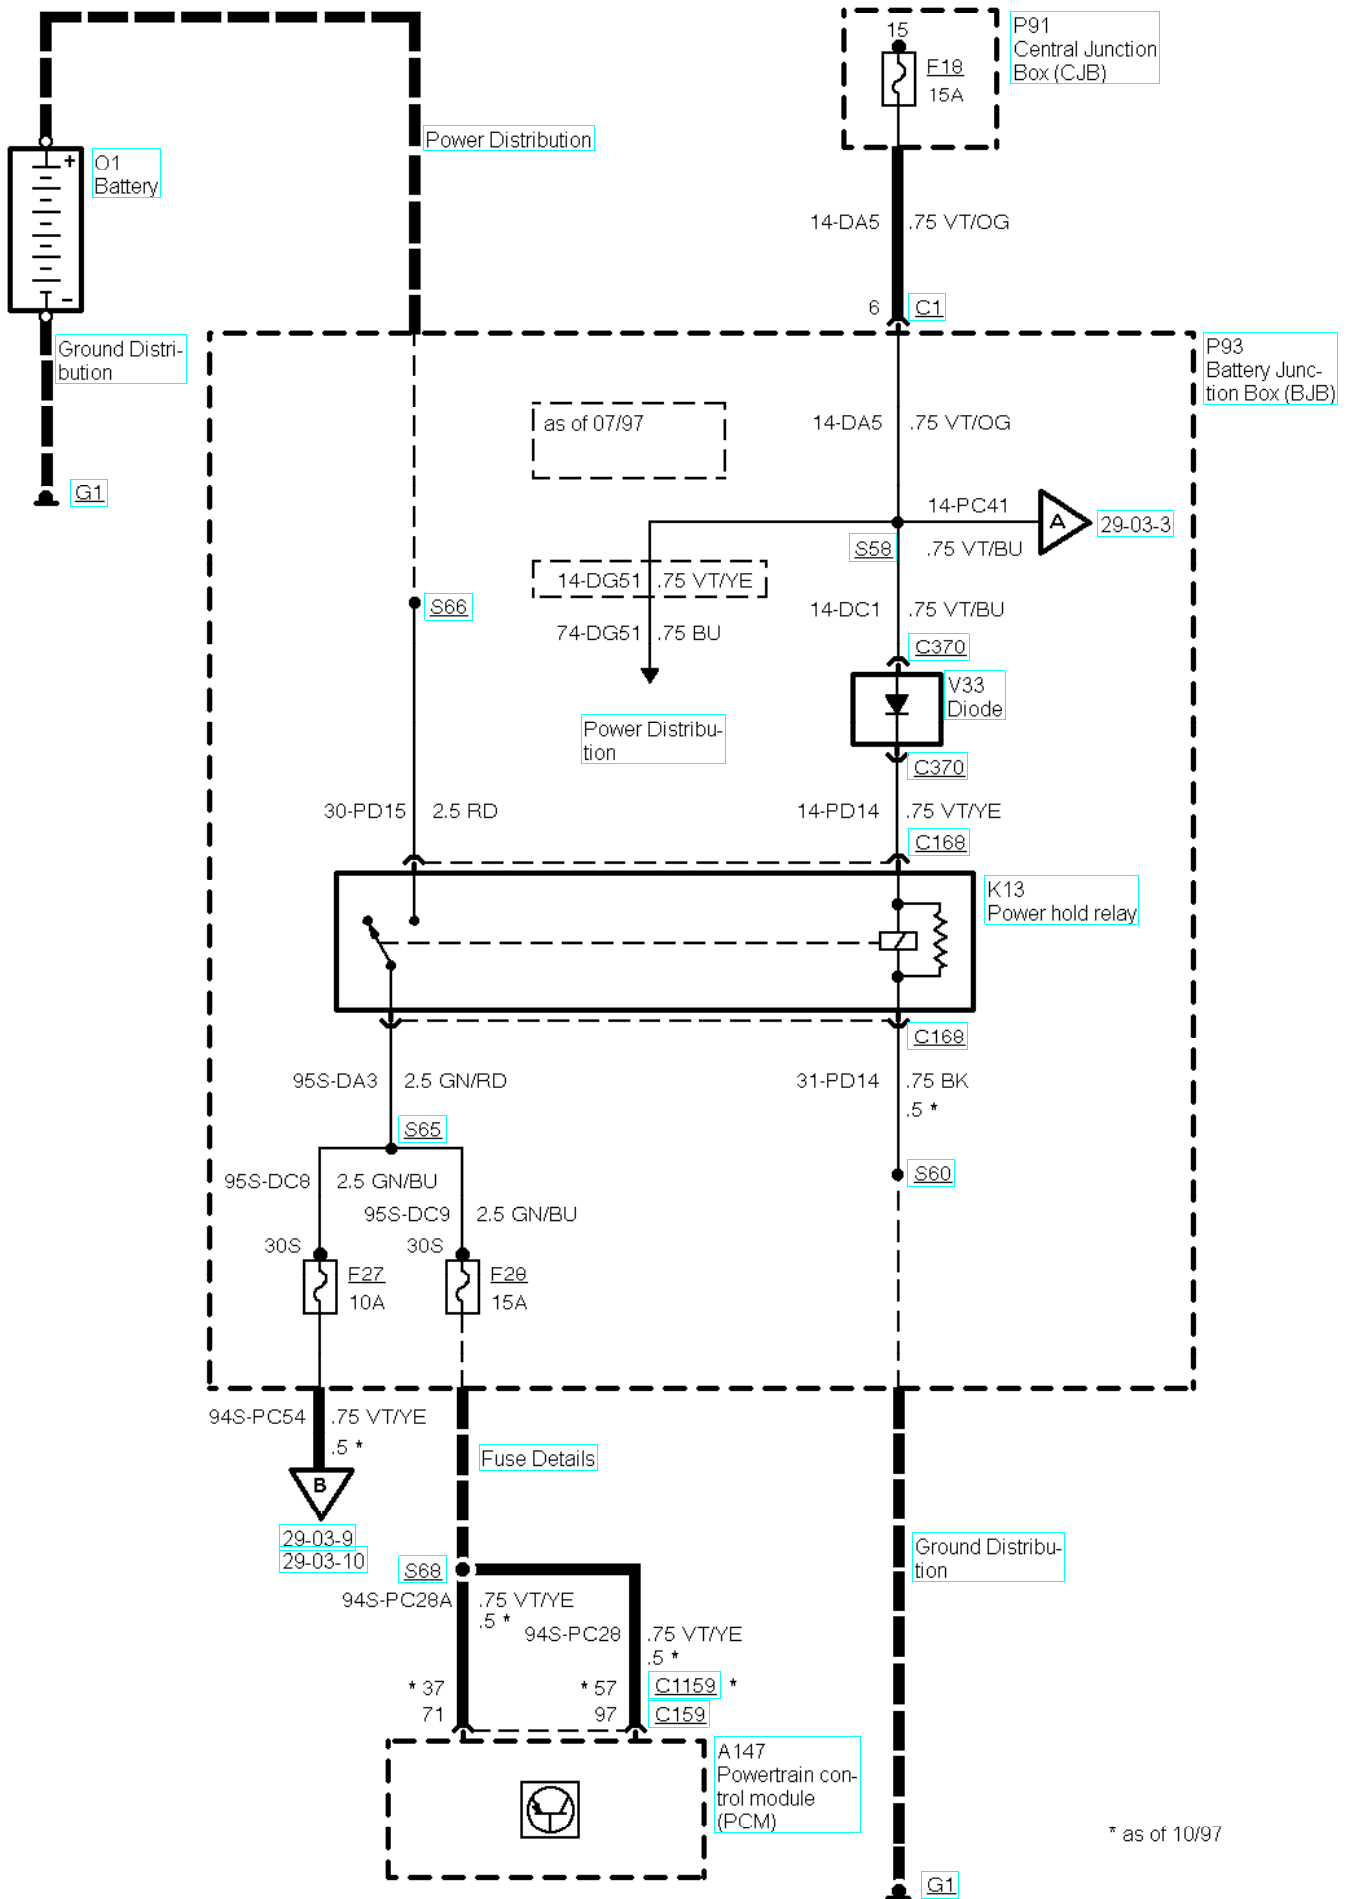

* as of 10/97

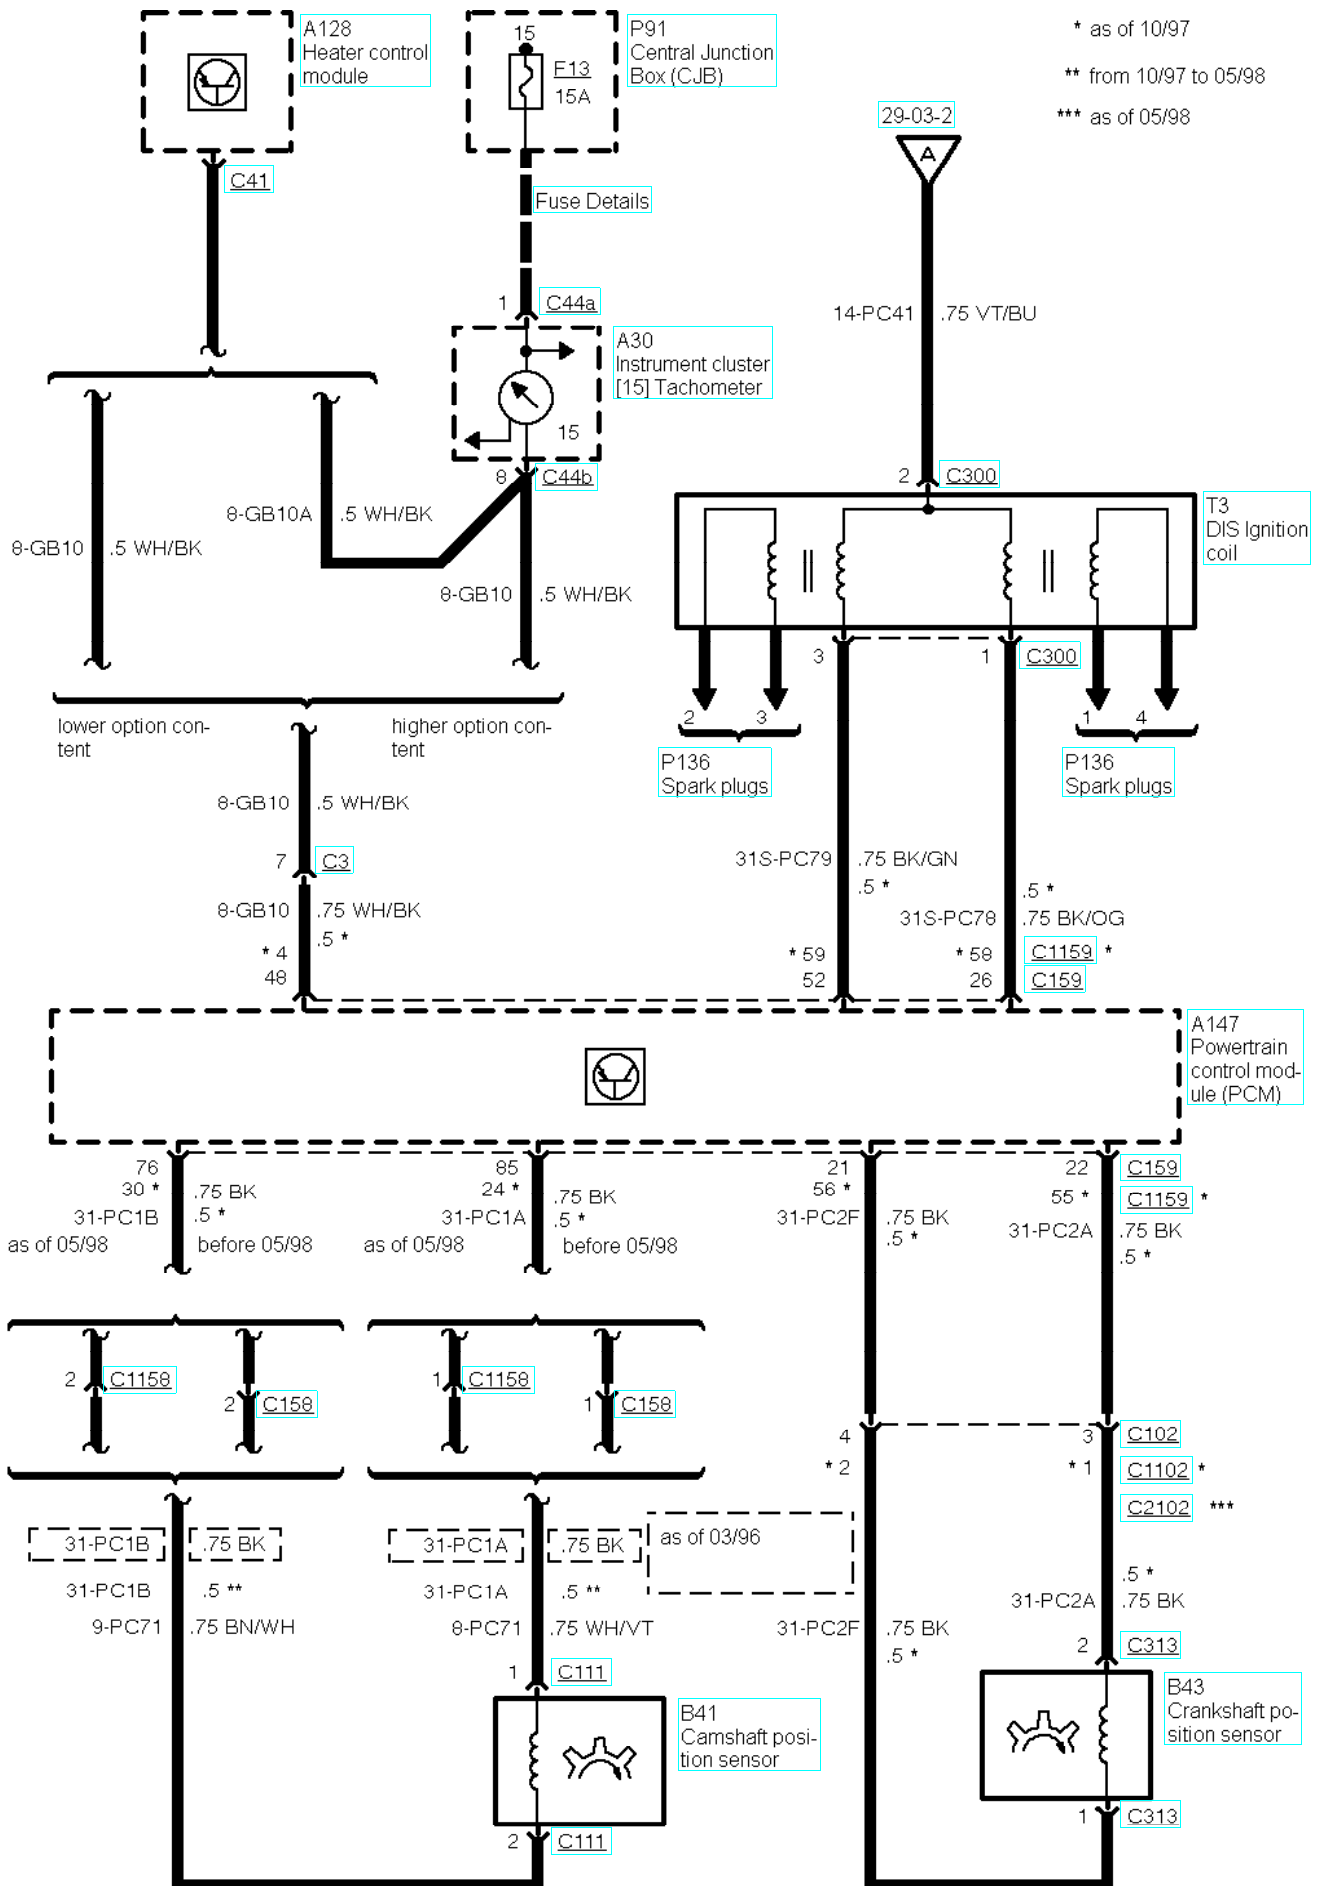

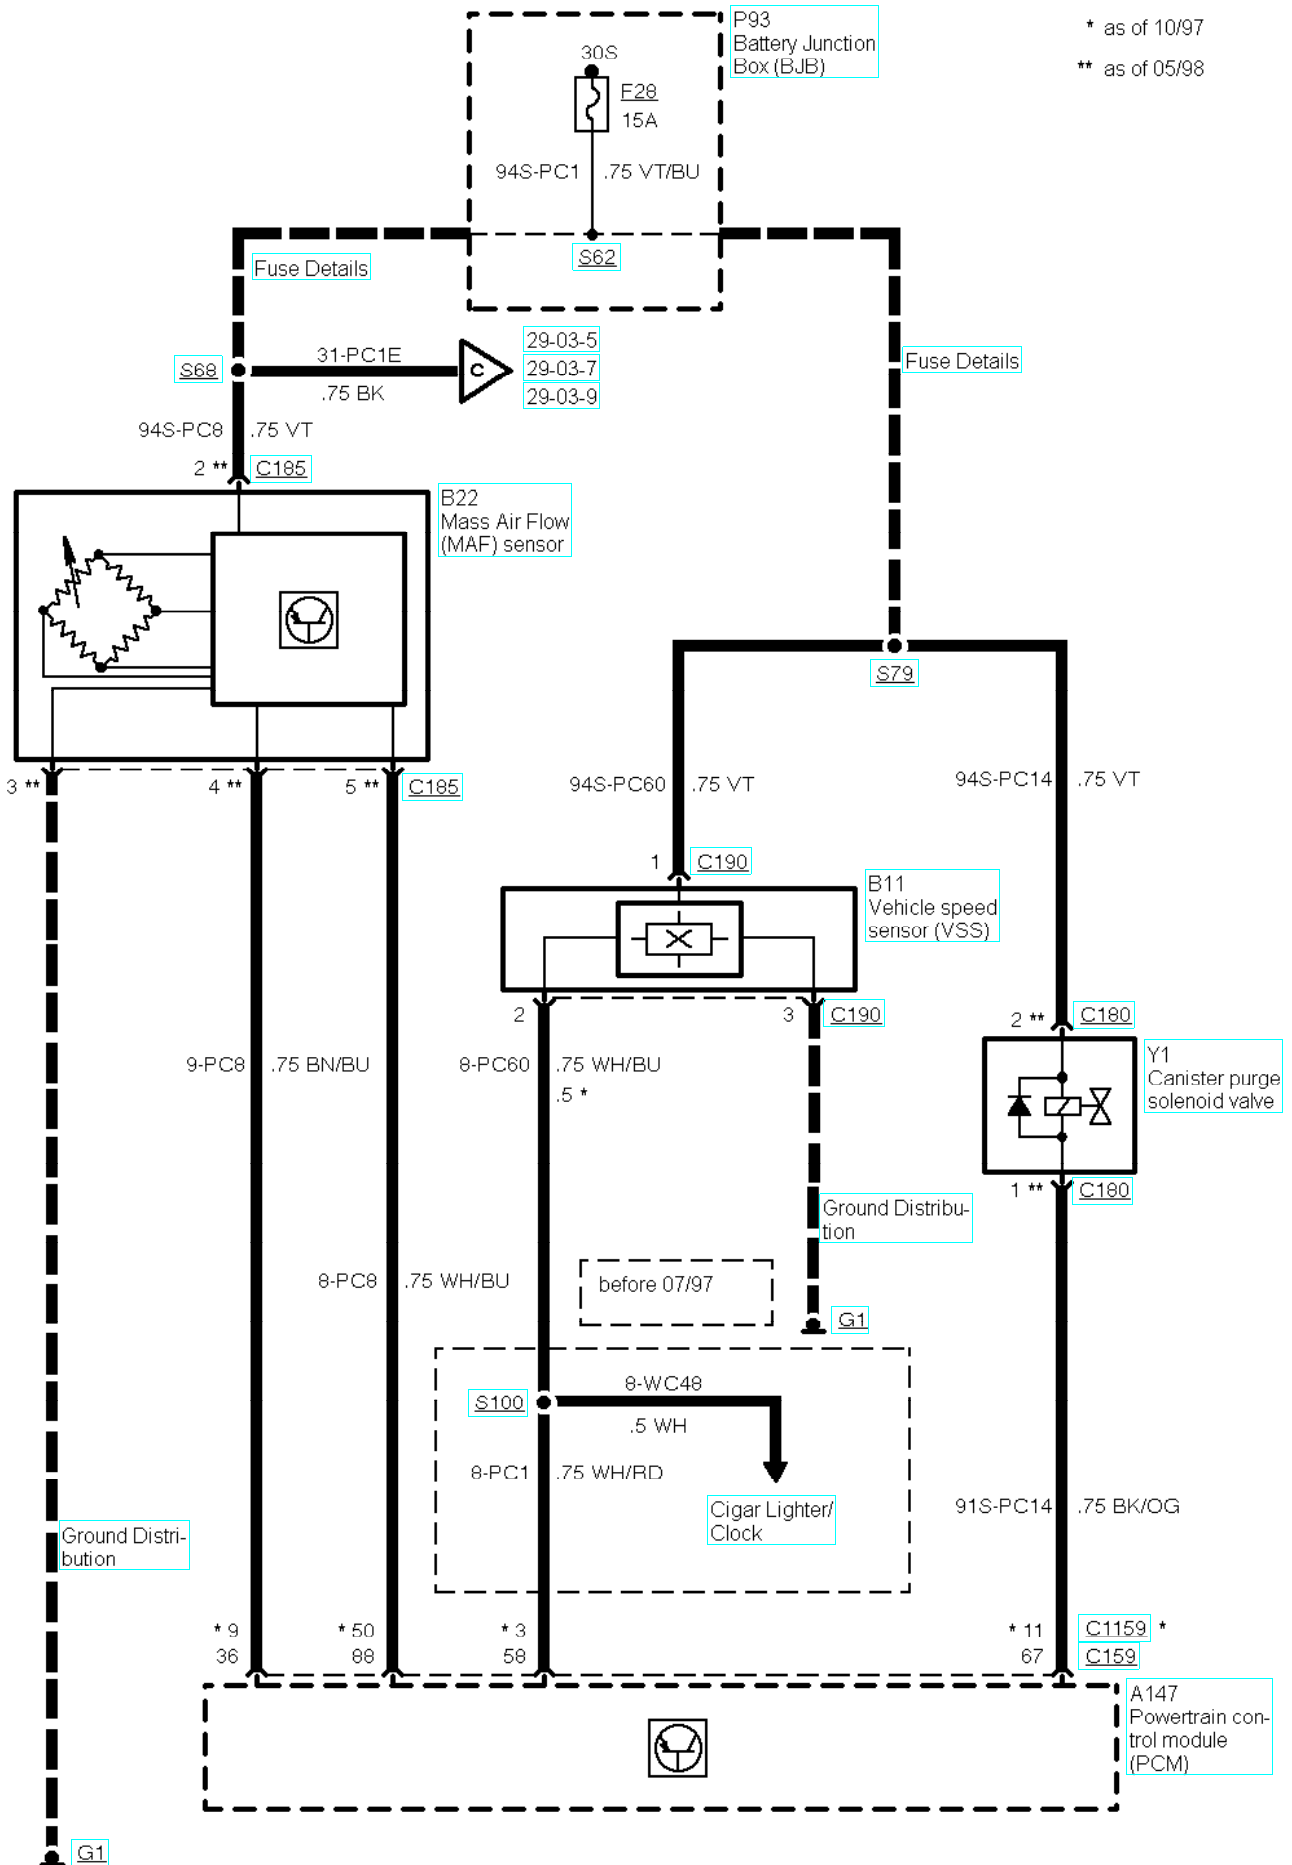

* as of 10/97

** as of 05/98

P93
Battery Junction
Box (BJB)

30S
E28
15A

94S-PC1 .75 VT/BU

Fuse Details

S62

Fuse Details

S69

31-PC1E
.75 BK

29-03-5
29-03-7
29-03-9

94S-PC8 .75 VT
2 **
C185

B22
Mass Air Flow
(MAF) sensor

C185

 
S79

94S-PC60 .75 VT

94S-PC14 .75 VT

1 C190


B11
Vehicle speed
sensor (VSS)



8-PC60 .75 WH/BU
.5 *

3 C190

Y1
Canister purge
solenoid valve

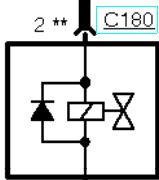

9-PC8 .75 BN/BU

8-PC8 .75 WH/BU

Ground Distribu-
tion

before 07/97

G1

S100

8-WC48
.5 WH

Cigar Lighter/
Clock

8-PC1 .75 WH/RD

91S-PC14 .75 BK/OG

Ground Distribu-
tion

* 9
36

* 50
88


* 3
58


* 11
67


C1159 *
C159


A147
Powertrain control
module
(PCM)


G1

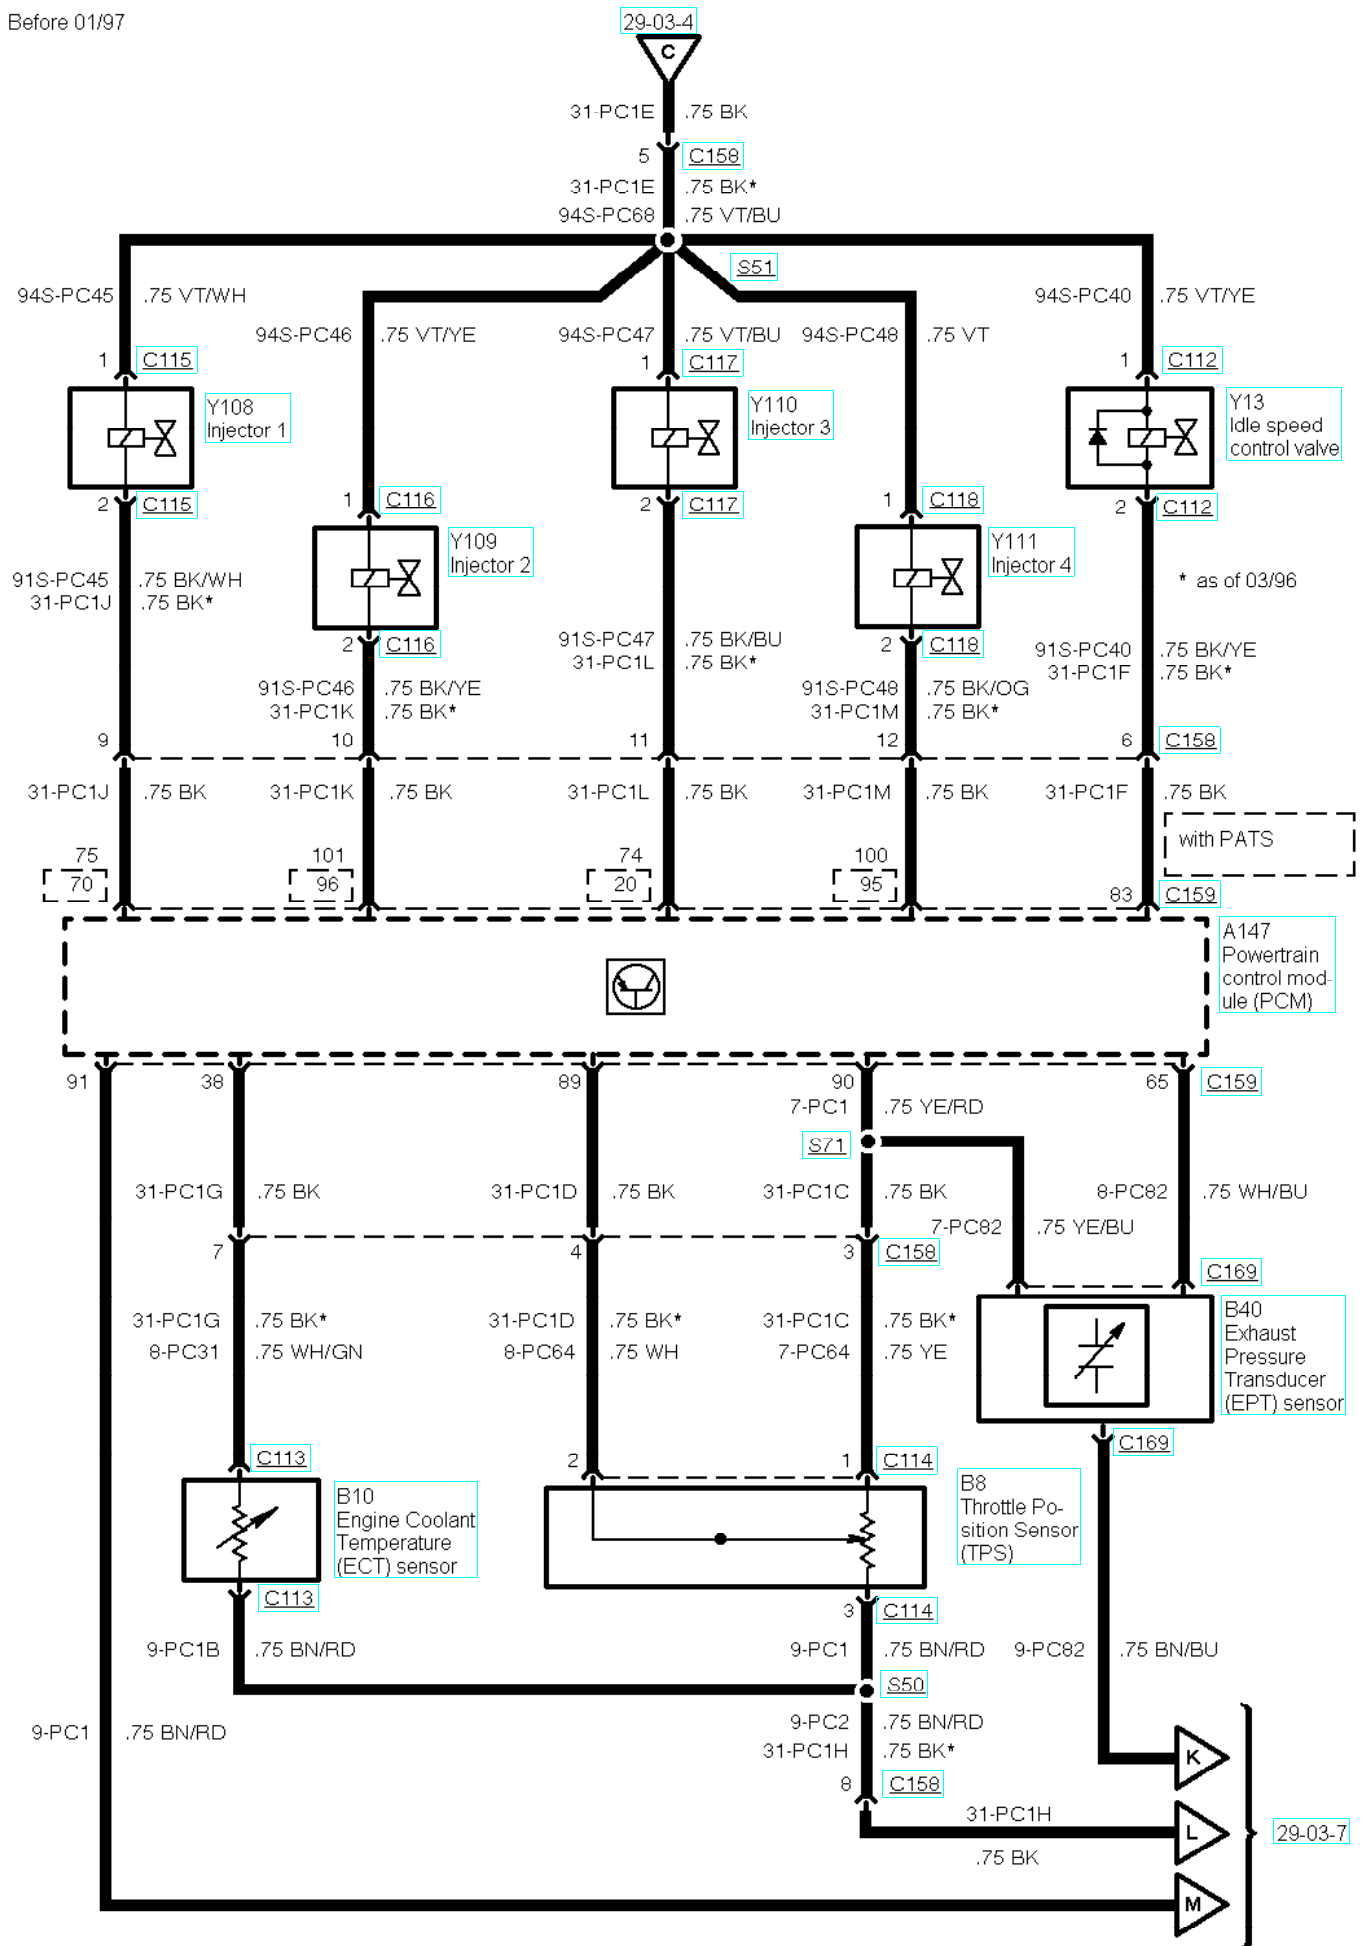


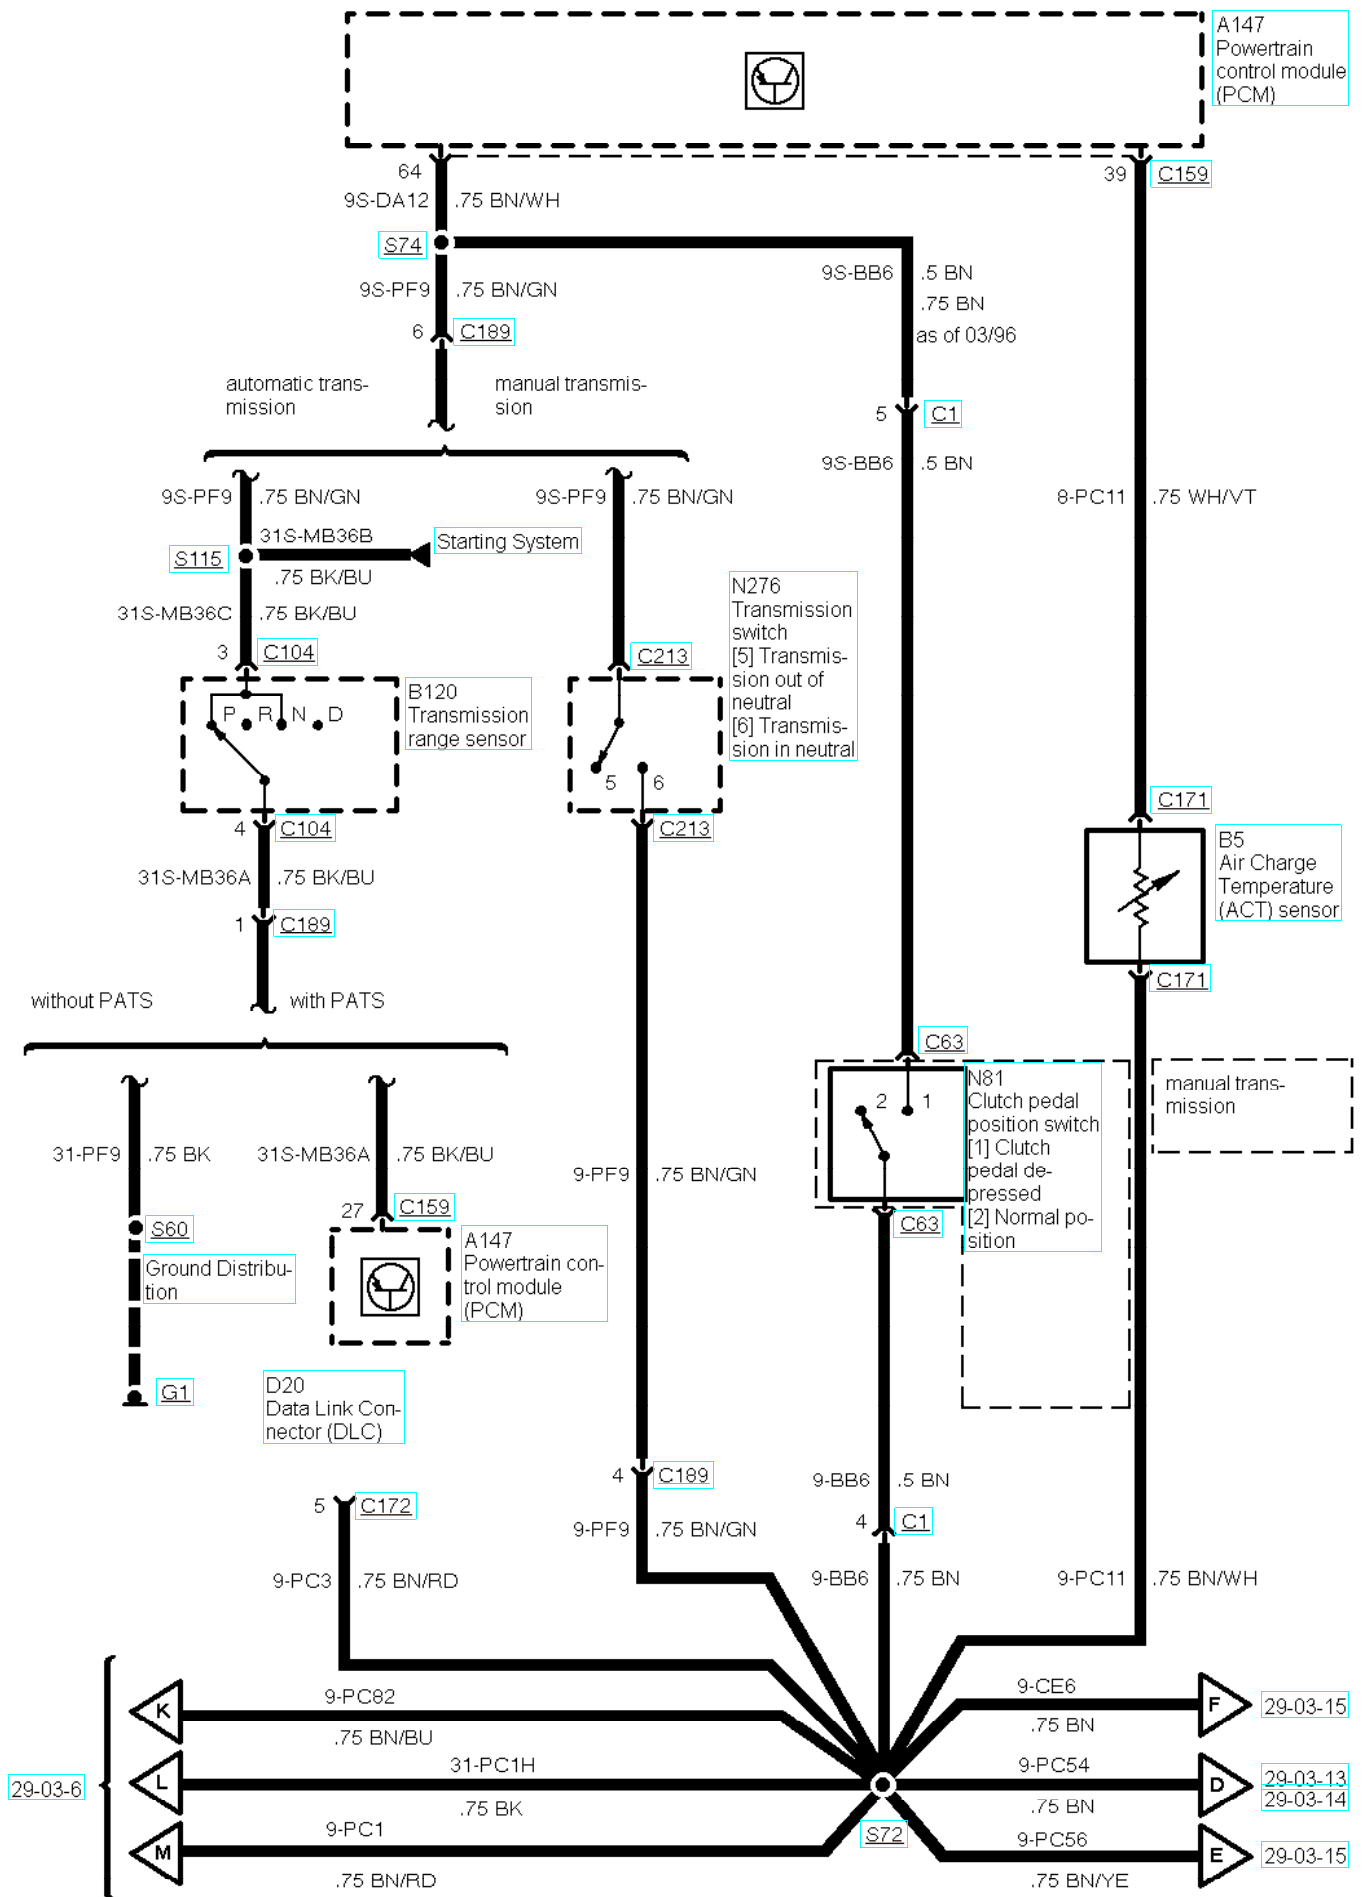

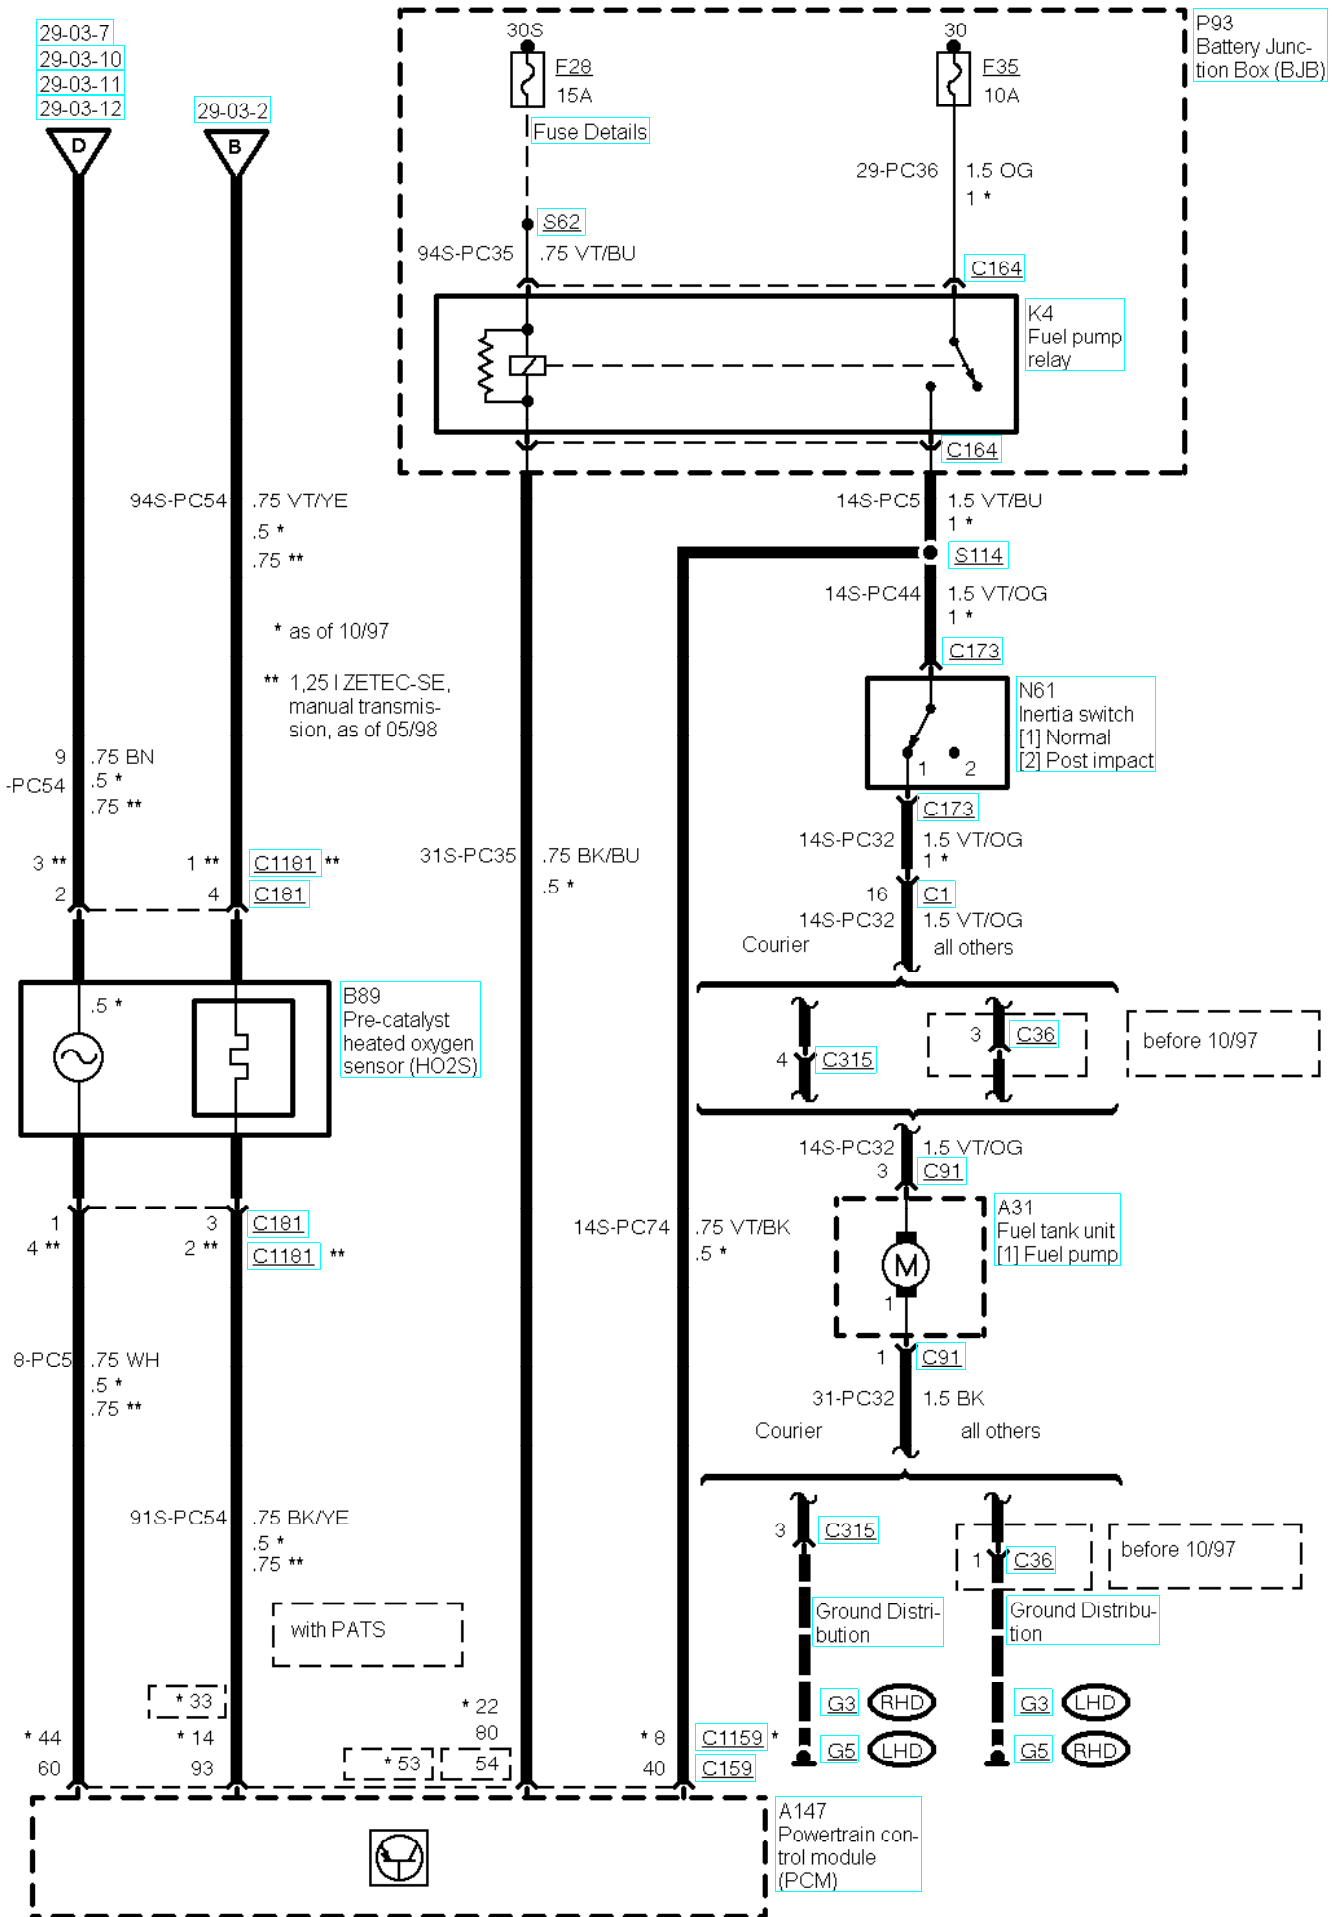

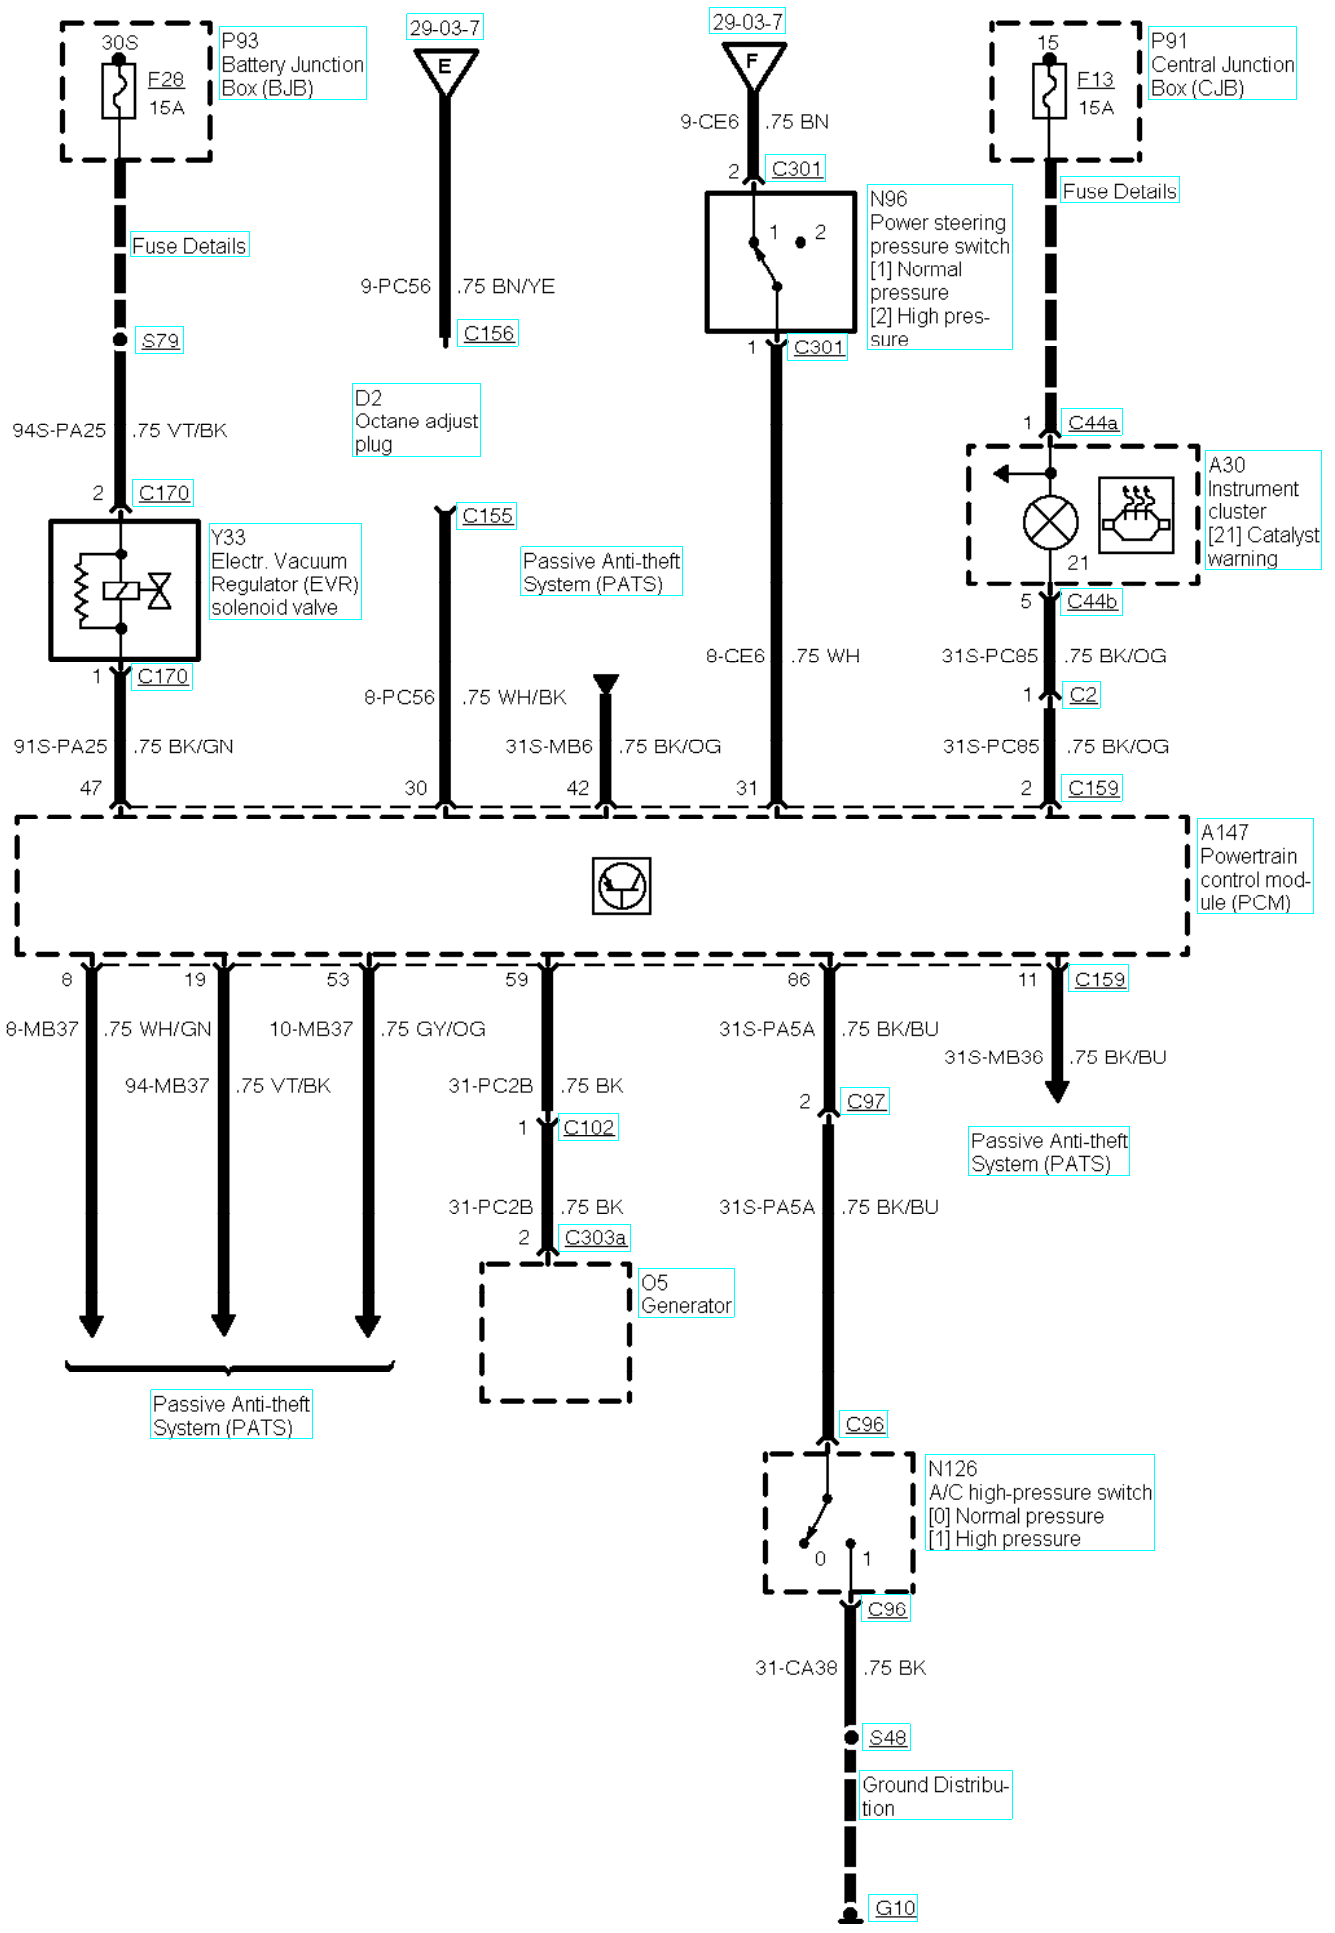

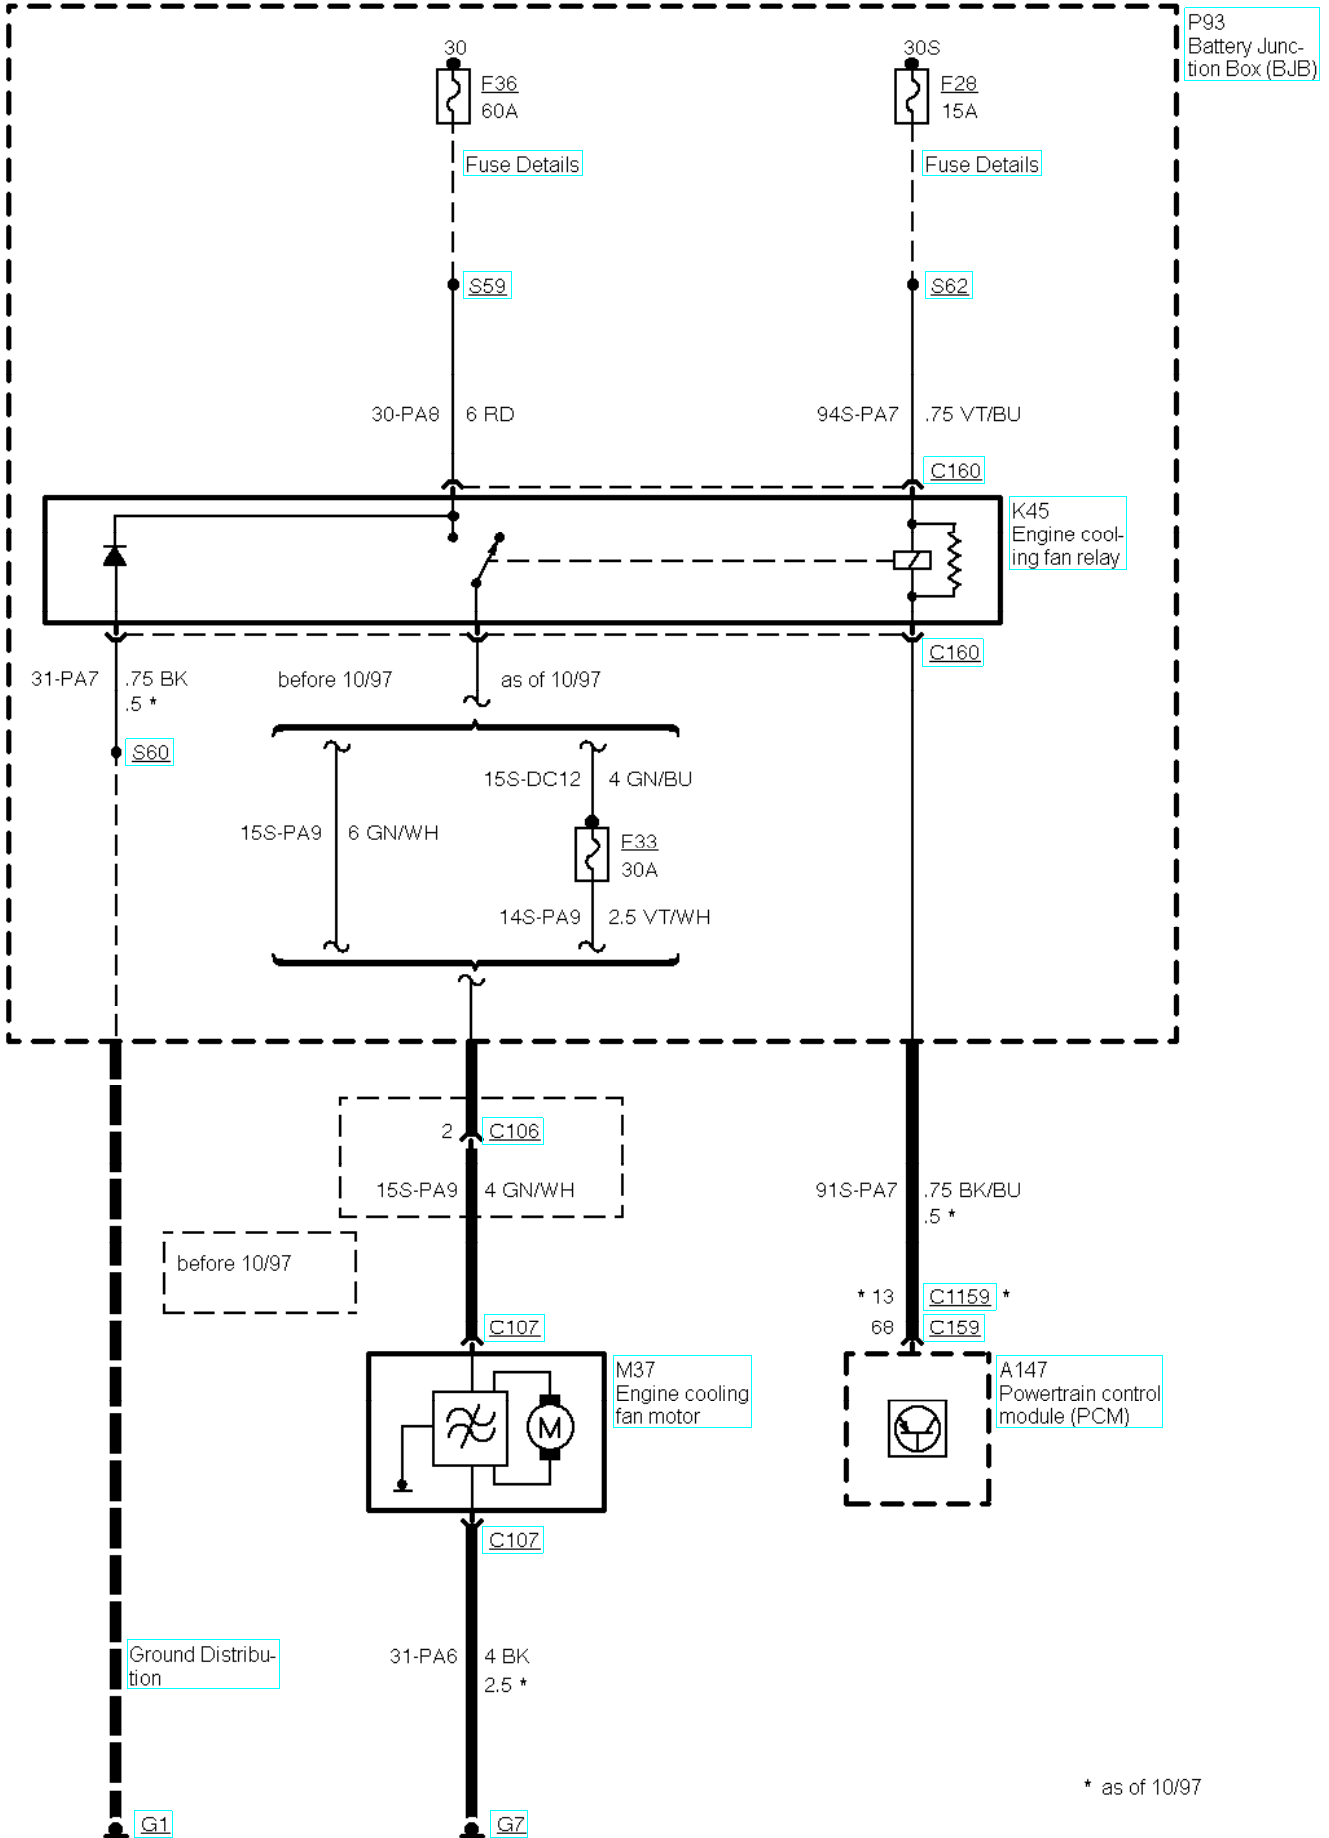

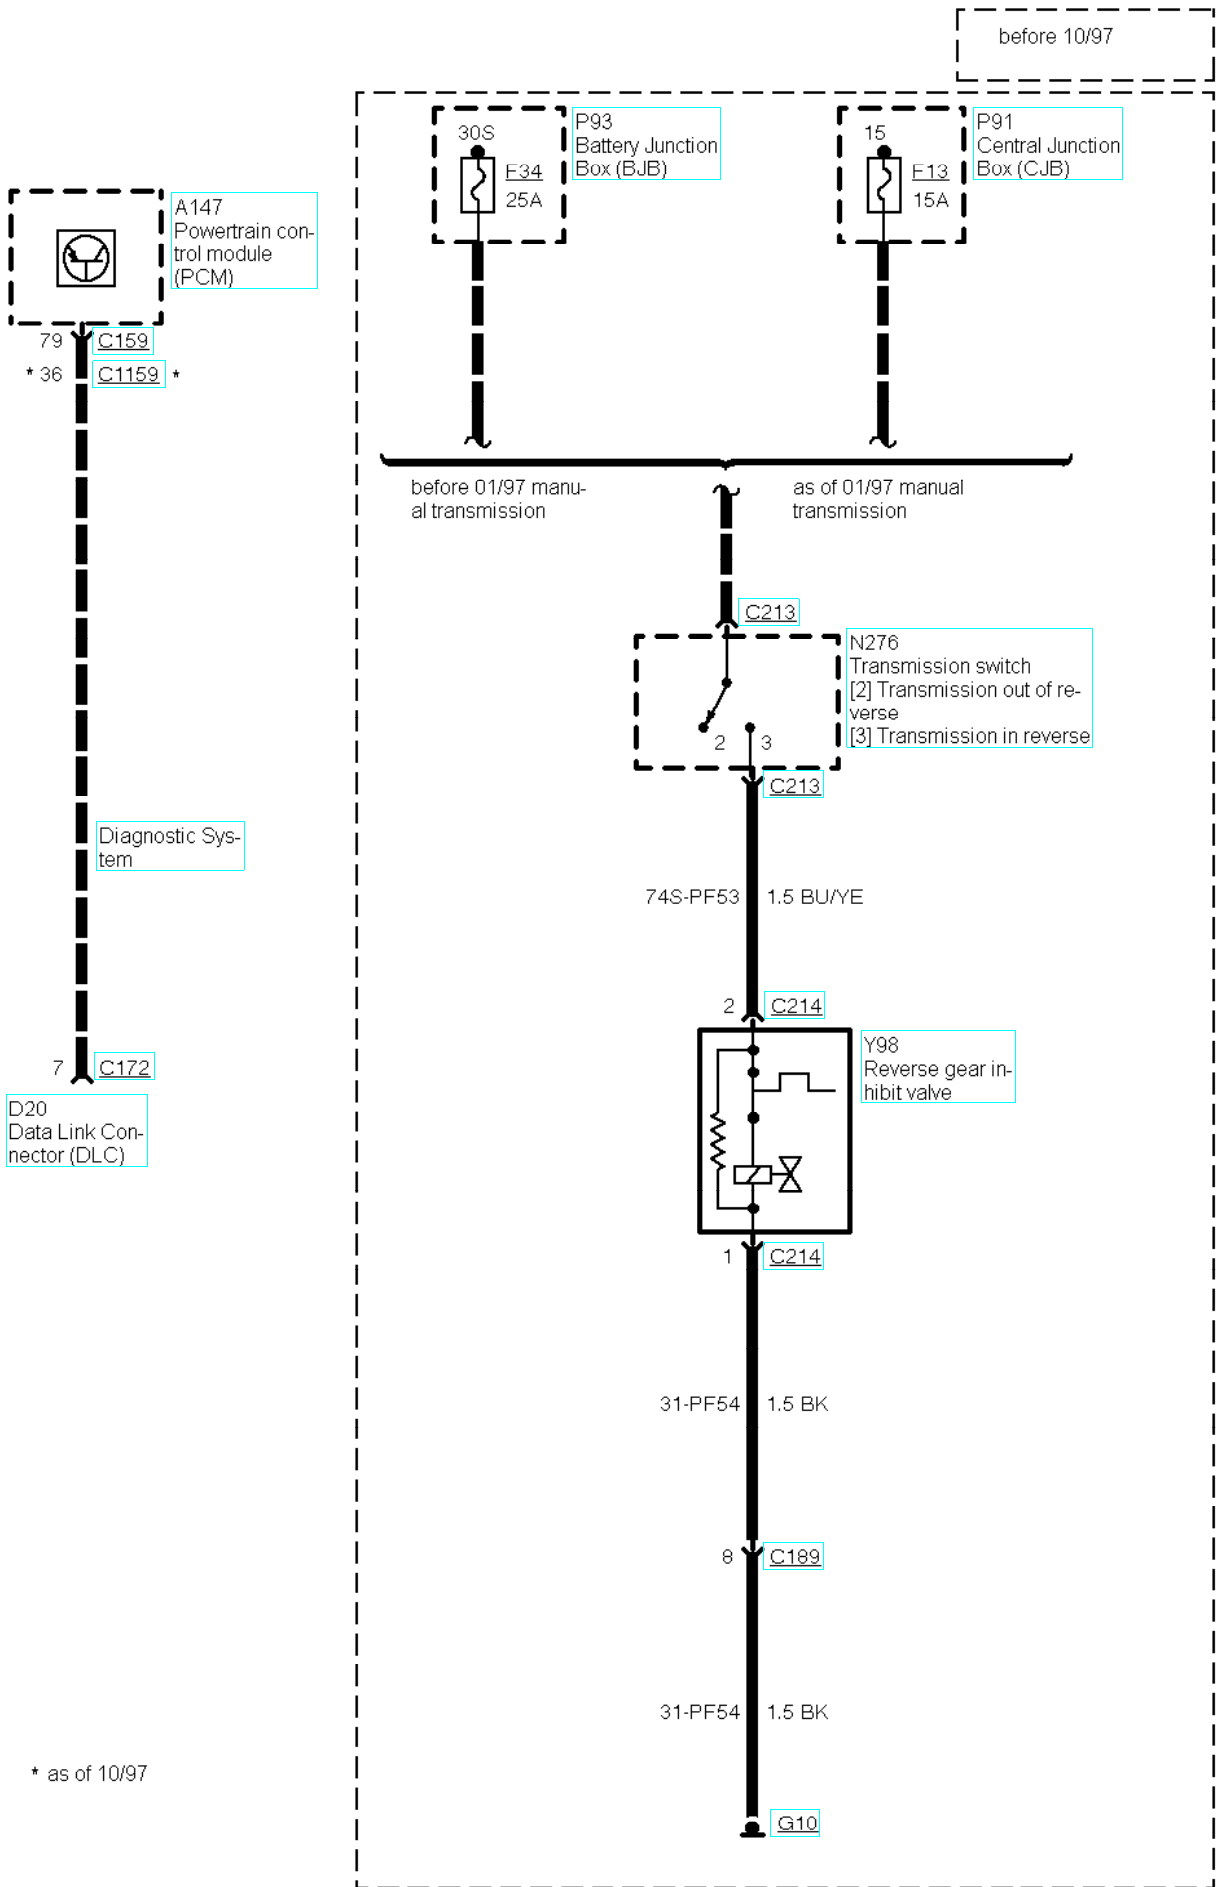

* as of 10/97