





		Fuse number															
		1	2	2*	3	4	4*	5	6	7	8	9	10	11	12	13	14
		15A	20A	7.5A** 10A	10A	10A	20A	15A* 20A	7.5A** 10A	7.5A** 10A	15A	15A	15A	30A	20A	15A	10A
12-01	ABS with Brake Traction Control System (BTCS)															●	
12-02	Anti-lock Braking System (ABS)															●	
17-01	Automatic Transmission																
26-01	Starting System																
29-01	Diagnostic System																
29-02	Engine Control 1,3   Endura-E															●	
29-03	Engine Control 1,25/1,4   ZETEC-SE															●	
29-04	Engine Control 1,8   Diesel Endura-DE															●	
31-01	Charging System															●	
32-01	Headlamps LHD																
32-02	Headlamps RHD							●	●								
32-03	Daytime Running Lamps																
32-04	Headlamp Levelling							●									
32-05	Stop Lamps															●	
32-06	Reversing Lamps															●	
32-07	Fog Lamps LHD							●	●								
32-08	Fog Lamps RHD							●	●								
32-09	Fog Lamps - Scandinavia							●									
32-10	Signal and Hazard Indicators						●										
32-11	Parking Lamps/Licence Plate Lamps							●	●								
32-12	Wiper/Washer Control														●		
32-13	Headlamp Washer														●		
32-14	Horn						●										
33-01	Entry Illumination		●		●	●		●								●	
33-02	Instrument Illumination							●	●			●	●				
33-03	Instrument Cluster															●	
33-04	Auxiliary Warning		●													●	
33-05	Cigar Lighter/Clock	●	●		●	●		●								●	
33-06	De-icing		●			●		●								●	
33-07	Anti-theft Alarm									●			●			●	
33-08	Passive Anti-theft System (PATS)															●	

\* as of 01/97

\*\* as of 10/97

1	2	2*	3	4	4*	5	6	7	8	9	10	11	12	13	14
15A	20A	7.5A** 10A	10A	10A	20A	15A* 20A	7.5A** 10A	7.5A** 10A	15A	15A	15A	30A	20A	15A	10A

Fuse number																
15	16	17	18	19	20	20**	21	22	41	42	43	44	45	49	50	
10A 7.5A**	30A	15A	15A	10A 7.5A**	30A 10A	25A	10A**	10A	10A	10A	10A	20A	15A ●10A	20A	25A	
																12-01
																12-02
																17-01
																26-01
								●								29-01
			●													29-02
			●													29-03
			●													29-04
																31-01
																32-01
					●	●										32-02
							●				●					32-03
																32-04
																32-05
																32-06
									●	●						32-07
																32-08
											●					32-09
		●														32-10
															●	32-11
																32-12
					●	●										32-13
																32-14
																33-01
																33-02
																33-03
																33-04
				●												33-05
●																33-06
				●								●				33-07
				●												33-08
15	16	17	18	19	20	20**	21	22	41	42	43	44	45	49	50	
7.5A** 10A	30A	15A	15A	7.5A** 10A	10A 30A	25A	10A**	10A	10A	10A	10A	20A	15A ●10A	20A	25A	

● as of 03/96

\*\* as of 10/97





		Fuse number															
		23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	
		10A	10A	7.5A *10A	7.5A *10A	10A 15A	15A	20A	3A	30A	3A	30A	30A** 25A	3A 10A	60A	40A	
12-01	ABS with Brake Traction Control System (BTCS)								●	●		●					
12-02	Anti-lock Braking System (ABS)								●	●		●					
17-01	Automatic Transmission														●		
26-01	Starting System														●		
29-01	Diagnostic System																
29-02	Engine Control 1,3   Endura-E					●	●				●	●	●	●	●		
29-03	Engine Control 1,25/1,4   ZETEC-SE					●	●				●	●	●	●	●		
29-04	Engine Control 1,8   Diesel Endura-DE					●	●				●		●		●		
31-01	Charging System																
32-01	Headlamps LHD	●	●	●	●												
32-02	Headlamps RHD	●	●	●	●												
32-03	Daytime Running Lamps	●	●	●	●												
32-04	Headlamp Levelling			●	●												
32-05	Stop Lamps																
32-06	Reversing Lamps							●									
32-07	Fog Lamps LHD							●									
32-08	Fog Lamps RHD							●									
32-09	Fog Lamps - Scandinavia							●									
32-10	Signal and Hazard Indicators																
32-11	Parking Lamps/Licence Plate Lamps																
32-12	Wiper/Washer Control																
32-13	Headlamp Washer																
32-14	Horn																
33-01	Entry Illumination																
33-02	Instrument Illumination																
33-03	Instrument Cluster																
33-04	Auxiliary Warning							●									
33-05	Cigar Lighter/Clock						●										
33-06	De-icing															●	
33-07	Anti-theft Alarm																
33-08	Passive Anti-theft System (PATS)	●									●			●	●		

\* as of 03/96

\*\* as of 01/97







